



Air Conditioner Controller Function Key Specification

<http://www.livolo.com>

Installation precautions

1. Be sure to turn off the power before installation.
2. Must be wired in accordance with the wiring requirements.
3. The load connected to a single circuit cannot exceed 5A.
4. The diameter of mounting box should be at least 60mm, and the depth should be at least 38mm.

Installation Instructions



1
Open the package then take out product.



3
Use the two screws to fix.



2
Connect wire and tighten the screws.



4
Cover the panel, connect the power.

Function Introductions

The air conditioner controller has heating, cooling and exhaust functions, and the functions can be switched through the mode button on the panel. Turn on/off the air conditioner controller via the power touch button. When in standby mode, the power indicator light is blue, the temperature display and temperature adjustment touch buttons are hidden. When the power button is touched, the temperature display and the temperature

and speed adjustment touch buttons are lit. It displays the current indoor temperature when turned on the air conditioner controller.

When the temperature adjustment button is touched, the temperature display shows the setting temperature, touch the button again to set the temperature as needed. When the temperature adjustment button "+" is continuously touched, the temperature will continue to increase, and the temperature

value will increase fast and fast as the touch time increases. And same operation for the button "-".

Touch the "+" and "-" buttons simultaneously for more than 3 seconds to switch between Fahrenheit and Celsius. The temperature display will switch to room temperature without operation in 5 seconds. The air conditioner controller has 4 wind speed modes. Touch the speed control button to cycle through the

4 modes of low wind speed, medium wind speed, high wind speed and automation. The touch button backlight has two levels of brightness for cooling mode, heating and exhaust mode. When the mode switch button is touched, the cooling, heating, and exhaust modes are switched in sequence. If the current mode is highlighted for 30 seconds and without operation, the backlight of the unselected mode button will go out. The air conditioner controller has power-off memory function,

it will restore the status before the power-off when the power is turned on again.



Precautions


If the device does not work properly, please turn off the power and recover it after 1 minute.

Product specifications

No.	Technical index	Requirements
1	Dimension	45.1mm*45.1mm*38mm (Master) 115mm*90mm*40mm (Slave)
2	Temperature accuracy error	≤ 1 degree
3	Voltage	100-240V~ 50/60Hz
4	Load	5A/1 circuit
5	Self consumption	<0.8W

No.	Technical index	Requirements
6	Electron lifetime	>30,000 times operation
7	Flame retardant shell	Yes
8	Operation environment	-10°C - + 40°C, RH<95%

Wiring Instructions

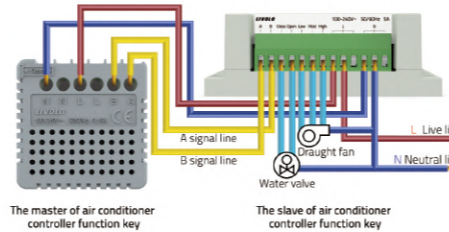

Product size description:

