



ZigBee/ EC Two-button Remote Control Specification

<http://www.livolo.com>

Product Instructions:

Before using the ZigBee/EC two-button remote control, you need to put in the CR2032 button battery to make it work properly. Press the button and the blue indicator at the top of the remote will light up.

Basic Functions

ZigBee/ EC two-button remote control can wirelessly control the on and off of devices such as touch switches. The remote can be used in two ways, one is to control the switch device through the gateway, setting automation in the gateway, and the other is to directly pair the switch

and control the device remotely.

Precautions

If the remote control doesn't work well, please take out the button battery and put it back after 1 minute of power off.



Specifications

No.	Technical Parameters	Requirements
1	Size	56mm*32mm*14.3mm
2	Voltage	Button battery CR2032, 3V
3	Status indication	Blue LED indicator light
4	Operation environment	-10℃ - + 40℃, RH<90%
5	Flame retardant shell	YES
6	Battery Life	Three years

ZigBee/EC Switch and Gateway Synchronization

Scan the QR code to download the LIVOLO APP



ANDROID APP
DOWNLOAD



IOS APP
DOWNLOAD


Remote Control Instructions

1. The method of controlling the switch through the gateway

Before using this method, the gateway must be configured.

Network Synchronization:

- 1) Open LIVOLO HOME app.
- 2) Pairing two-button remote control:
Click "Device", and then "+" in the upper right corner, "Remotes" -> "Button Remote Controller" -> select the gateway, and then follow the interface prompts to complete the pairing operation.

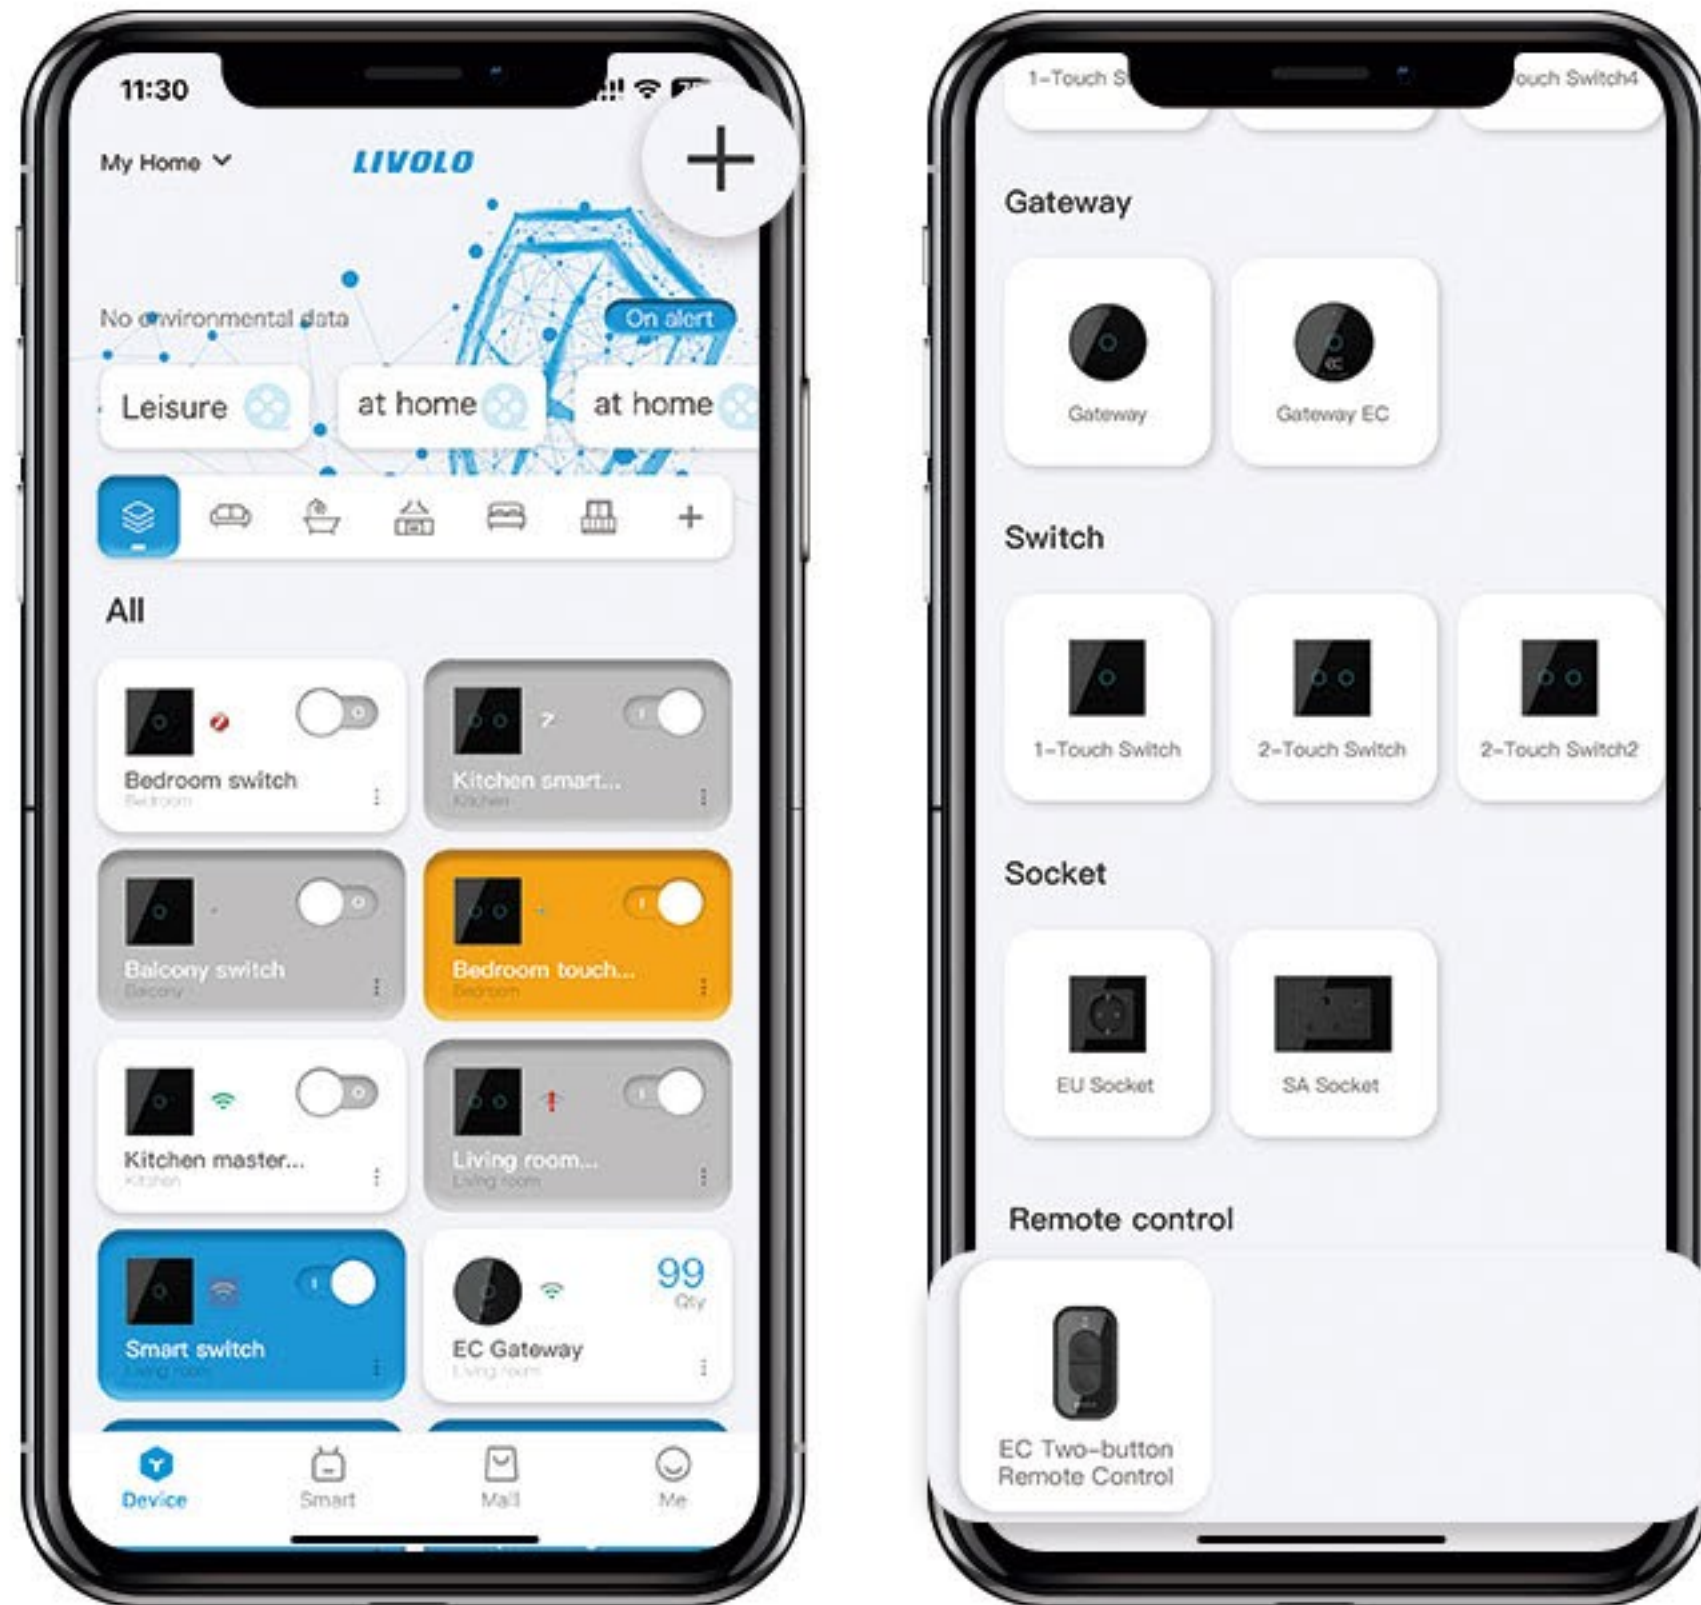

3) Set up automation rules:

Click "Automation" in the the upper right corner of "smart" page, and then follow interface prompts to set the required automation rules.

Delete Device

In the APP, click the "Button Remote Controllers" -> "... " in the upper right corner -> Delete

2. The method of directly controlling the switch

Pairing

- 1) Press and hold any button on the switch for 5 seconds, release it after the beep.
- 2) Press the pairing button of the ZigBee/EC two-button remote control (single press, double press or triple press), and the switch will beep once, indicating that the pairing is successful.

Delete Device

- 1) Press and hold the switch for 10 seconds to unpair all button remote controllers bound to the touch switch;

- 2) Long press the switch for 5 seconds, press the corresponding binding button of the two-button ZigBee/ EC remote control (single press, double press or triple press), the switch will beep twice, indicating that the two-button remote control is successfully unpaired.

Product Size

