



EC Mini Single-button Remote Control Specification

<http://www.livolo.com>

Product Instructions:

Before using the EC mini single-button remote control, you need to put in the CR1632 button battery to make it work properly. Press the button and the blue indicator will light up.

Basic Functions

EC mini single-button remote control can wirelessly control the on and off of devices such as touch switches. The remote can be used in two ways, one is to control the switch device through the gateway, setting automation in the gateway, and the other

is to directly pair the switch and control the device remotely.

Precautions

If the remote control doesn't work well, please take out the button battery and put it back after 1 minute of power off.



Specifications

No.	Technical Parameters	Requirements
1	Size	24mm*24mm*9mm
2	Voltage	Button battery CR1632, 3V
3	Status indication	Blue LED indicator light
4	Operation environment	-10°C- +40°C, RH<90%
5	Flame retardant shell	Yes
6	Battery Life	Three years

Download the LIVOLO APP

Scan the QR code



ANDROID APP
DOWNLOAD



IOS APP
DOWNLOAD


Remote Control Instructions

1. The method of controlling the switch through the gateway

Before using this method, the gateway must be configured.

Network Synchronization:

- 1) Open LIVOLO HOME app.
- 2) Pairing Mini single-button remote control: Click "Device", and then "+" in the upper right corner, "Remotes" -> "Mini Single-button Remote Control" -> select the gateway, and then follow the interface prompts to complete the pairing operation.

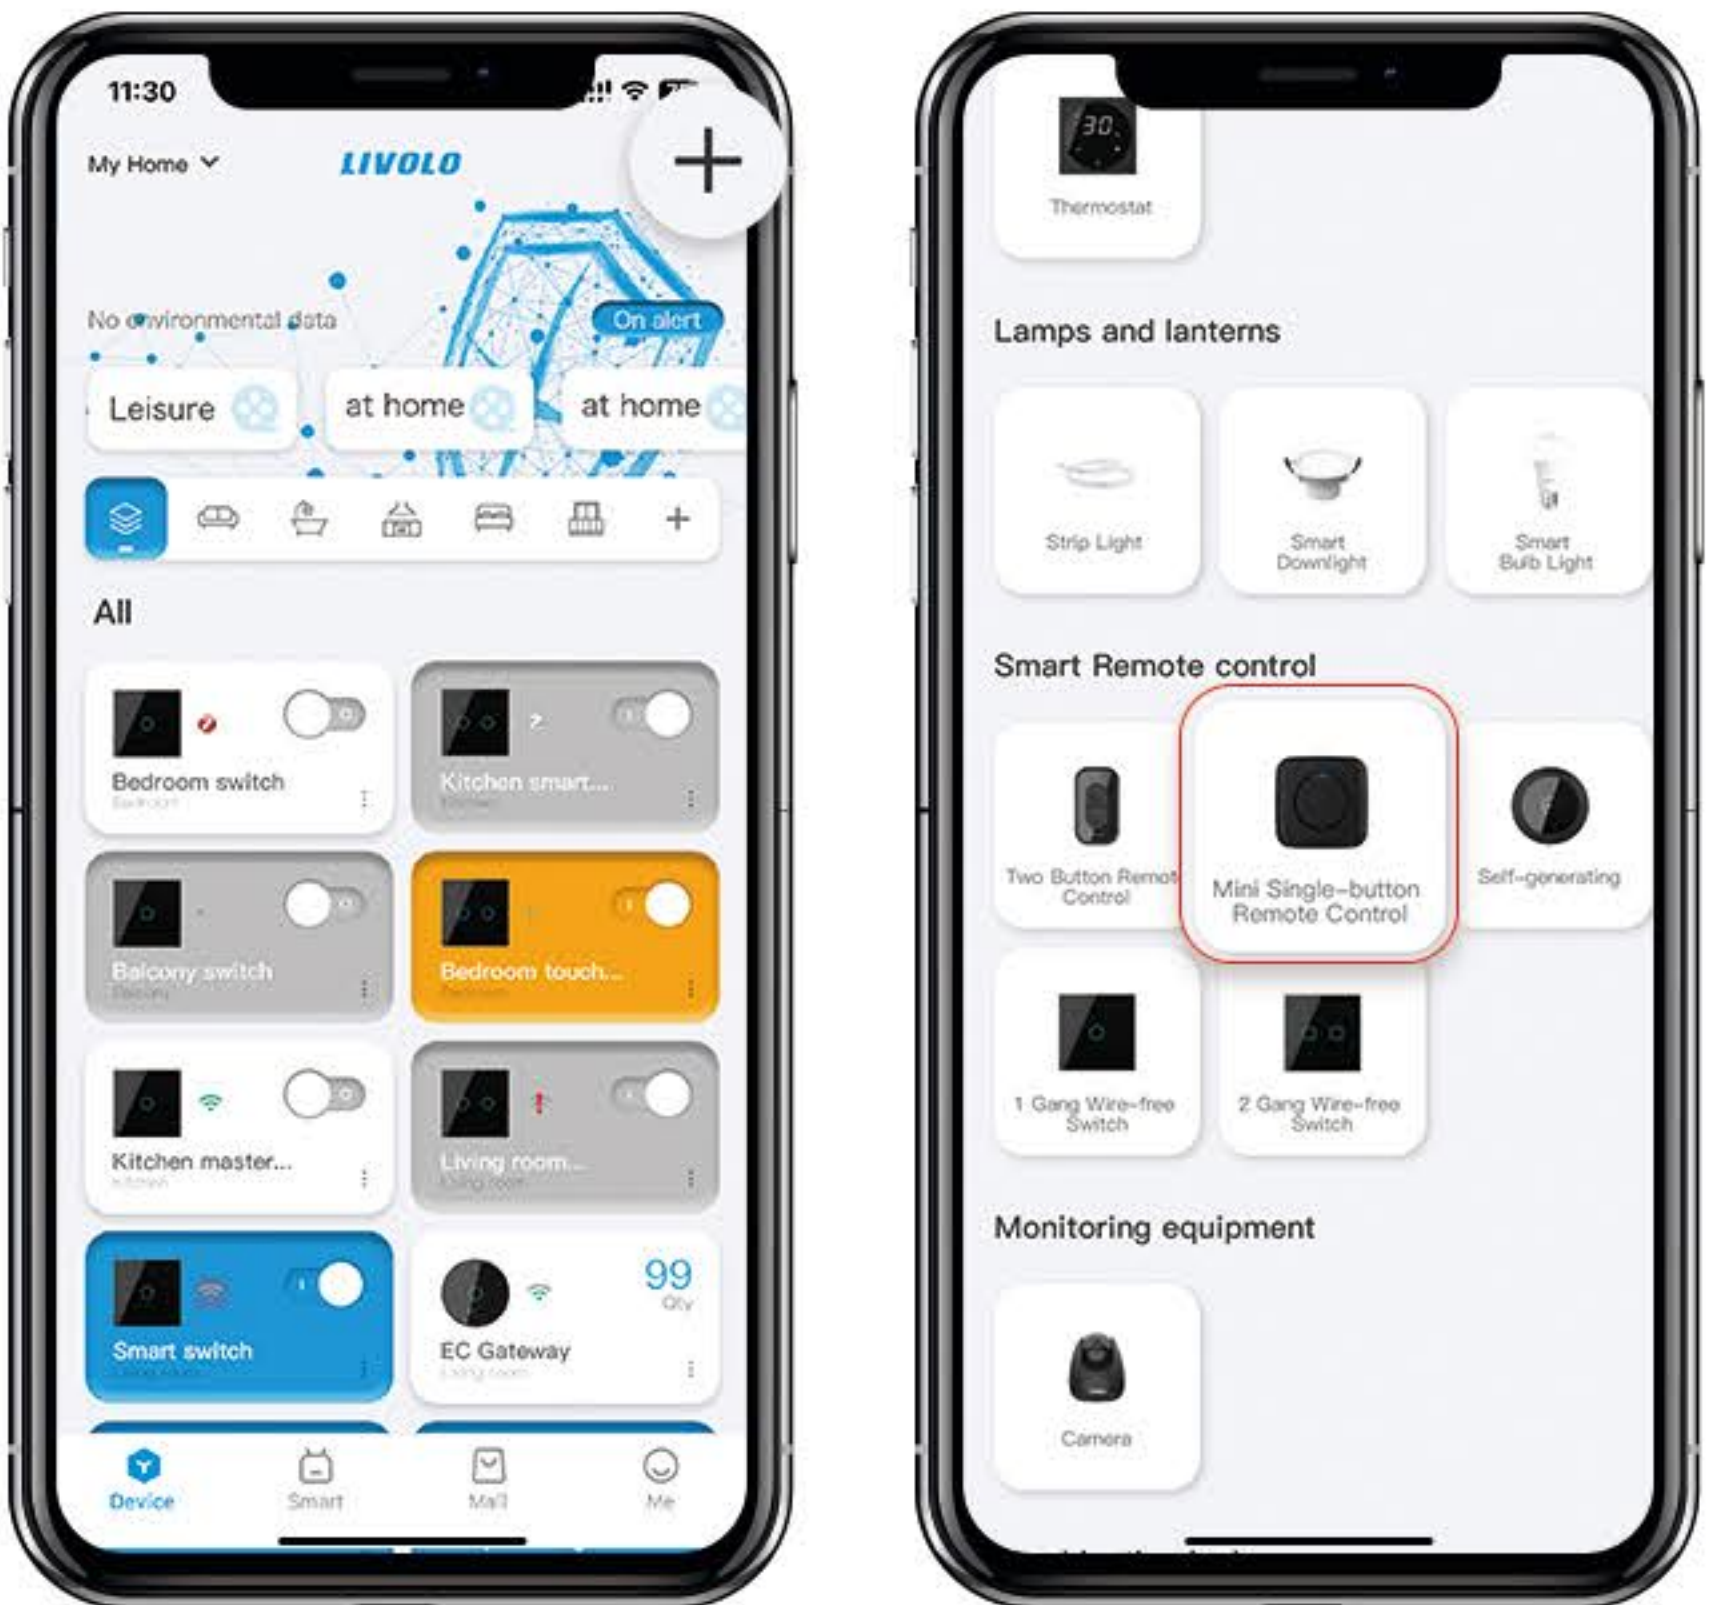

3) Set up automation rules:

Click "Automation" in the the upper right corner of "smart" page, and then follow interface prompts to set the required automation rules.

Delete Device

In the APP, click the "Mini Single-button Remote Control" -> "... " in the upper right corner -> Delete

2. The method of directly controlling the switch

Pairing

- 1) Press and hold any button on the switch for 5 seconds, release it after the beep.
- 2) Press the EC mini single-button remote control (single press, double press or triple press), and the switch will beep once, indicating that the pairing is successful.

Delete Device

- 1) Press and hold the switch for 10 seconds to

unpair all button remote controllers bound to the touch switch;
2) Long press the switch for 5 seconds, press the button of the EC mini single-button remote control (single press, double press or triple press), the switch will beep twice, indicating that the mini single-button remote control is successfully unpaired.

Product Size

